


IMPORTANT NOTICE. PLEASE READ BEFORE INSTALLING!

WARNING

COUNTERWEIGHT INSTALLATION INSTRUCTIONS

WARNING

- 1** Determine what counterweight you will need to use.
The larger weight is the 50oz and the smaller is the 28oz weight.

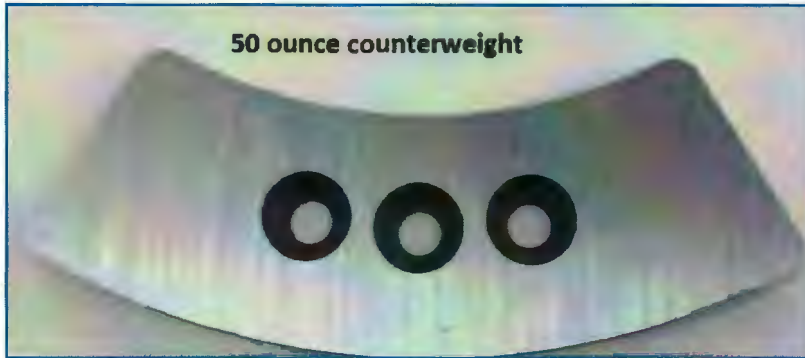

- 2** Ensure that the counterweight flywheel bolt holes threads are clean of oil, failure to do so will compromise the thread locker that is applied to the counterweight bolts and may result in the counterweight becoming dislodged.



DO NOT
Clean red thread
locker off bolts



- 3** Using a torque wrench tighten the counterweight bolts starting with the middle bolt to 15-18 ft/lbs.



***WARNING:** It is the sole responsibility of the installer to ensure that the right counterweight is installed and that the counterweight and flywheel threads (not bolts) are cleaned and tightened properly. As they can explode unexpectedly causing serious injury or death to the vehicle occupants and bystanders. Clutch cover and bell housing will not protect against exploding counterweight and flywheel. EXEDY Globalparts Corporation is in no way liable for any damage that may occur from improper installation.

EXEDY
EXEDY Globalparts Corporation

8601 Haggerty Road S., Belleville, MI 48111
Phone: 1-800-346-6091 or 1-734-397-3333
Fax: 1-734-397-7300